

Quick Start Guide

EN

ES

FR

DE

PT

IT

 
NL

SE

PL

JP

CN

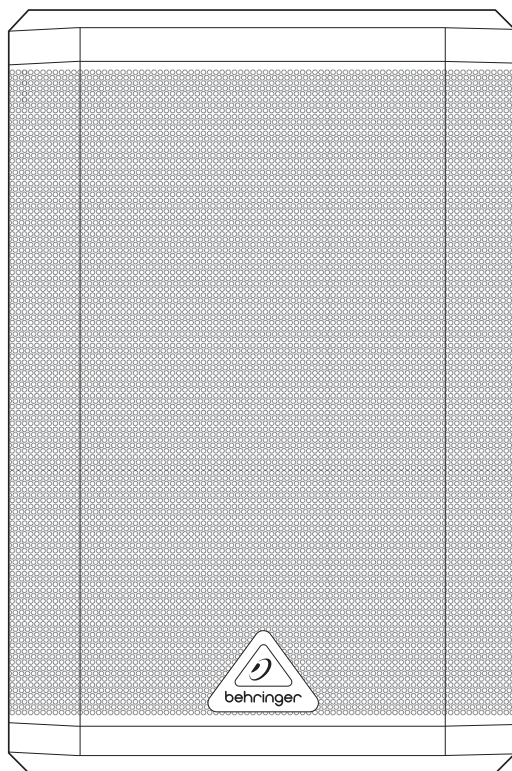

B1X

All-in-One Portable 250-Watt Speaker with Battery Operation, Digital Mixer, Effects, Remote Control via iOS / Android Mobile App, Bluetooth Audio Streaming and Wireless Microphone Option

behringer

EN

EN Important Safety Instructions

Terminals marked with this symbol carry electrical current of sufficient magnitude to constitute risk of electric shock.

Use only high-quality professional speaker cables with ¼" TS or twist-locking plugs pre-installed. All other installation or modification should be performed only by qualified personnel.



This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure - voltage that may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.

**Caution**

To reduce the risk of electric shock, do not remove the top cover (or the rear section). No user serviceable parts inside. Refer servicing to qualified personnel.

**Caution**

To reduce the risk of fire or electric shock, do not expose this appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the apparatus.

**Caution**

These service instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions. Repairs have to be performed by qualified service personnel.

**Warning**

Please refer to the information on the exterior of bottom enclosure for electrical and safety information before installing or operating the device.

1. Please read and follow all instructions and warnings.
2. Keep the apparatus away from water (except for outdoor products).
3. Clean only with dry cloth.
4. Do not block ventilation openings. Do not install in a confined space. Install only according to manufacturer's instructions.
5. Protect the power cord from damage, particularly at plugs and appliance socket.
6. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.

7. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other (only for USA and Canada). A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

8. Protect the power cord from damage, particularly at plugs and appliance socket.

9. Use only attachments and accessories recommended by the manufacturer.



10. Use only specified carts, stands, tripods, brackets, or tables. Use caution to prevent tip-over when moving the cart/apparatus combination.

11. Unplug during storms, or if not in use for

a long period.

12. Only use qualified personnel for servicing, especially after damage.

13. The apparatus with protective earthing terminal shall be connected to a MAINS socket outlet with a protective earthing connection.

14. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

15. Avoid installing in confined spaces like bookcases.

16. Do not place naked flame sources, such as lighted candles, on the apparatus.

17. Operating temperature range 5° to 35°C (41° to 95°F).

**18. Warning**

• Replacement of a battery with an incorrect type can defeat a safeguard.

- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
- Attention should be drawn to the environmental aspects of battery disposal.
- The battery should be charged regularly. Do not leave it in a discharged state, as this may shorten the battery life.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

LEGAL DISCLAIMER

Music Tribe accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph, or statement contained herein. Technical specifications, appearances

and other information are subject to change without notice. All trademarks are the property of their respective owners. Midas, Klark Teknik, Lab Gruppen, Lake, Tannoy, Turbosound, TC Electronic, TC Helicon, Behringer, Bugera, Aston Microphones and Coolaudio are trademarks or registered trademarks of Music Tribe Global Brands Ltd. © Music Tribe Global Brands Ltd. 2024 All rights reserved.

LIMITED WARRANTY

For the applicable warranty terms and conditions and additional information regarding Music Tribe's Limited Warranty, please see complete details online at community.musictribe.com/support.

ES

Instrucciones de seguridad

Las terminales marcadas con este símbolo transportan corriente eléctrica de magnitud suficiente como para constituir un riesgo de descarga eléctrica. Utilice solo cables de altavoz profesionales y de alta calidad con conectores TS de 6,3 mm o de bayoneta prefijados. Cualquier otra instalación o modificación debe ser realizada únicamente por un técnico cualificado.



Este símbolo, siempre que aparece, le advierte de la presencia de voltaje peligroso sin aislar dentro de la caja; este voltaje puede ser suficiente para constituir un riesgo de descarga.



Este símbolo, siempre que aparece, le advierte sobre instrucciones operativas y de mantenimiento que aparecen en la documentación adjunta. Por favor, lea el manual.

**Atención**

Para reducir el riesgo de descarga eléctrica, no quite la tapa (o la parte posterior). No hay piezas en el interior del equipo que puedan ser reparadas por el usuario. Si es necesario, póngase en contacto con personal cualificado.

**Atención**

Para reducir el riesgo de incendio o descarga eléctrica, no exponga este aparato a la lluvia, humedad o alguna otra fuente que pueda salpicar o derramar algún líquido sobre el aparato. No coloque ningún tipo de recipiente para líquidos sobre el aparato.

**Atención**

Las instrucciones de servicio deben llevarlas a cabo exclusivamente personal cualificado. Para evitar el riesgo de una descarga eléctrica, no realice reparaciones que no se encuentren descritas en el manual de operaciones. Las reparaciones deben ser realizadas exclusivamente por personal cualificado.

**Advertencia**

Consulte la información en el exterior del recinto inferior para obtener información eléctrica y de seguridad antes de instalar u operar el dispositivo.

1. Por favor, lea y siga todas las instrucciones y advertencias.
2. Mantenga el aparato alejado del agua (excepto para productos diseñados para uso en exteriores).
3. Limpie solo con un paño seco.
4. No obstruya las aberturas de ventilación. No instale en un espacio confinado. Instale solo de acuerdo con las instrucciones del fabricante.
5. Proteja el cable de alimentación contra daños, especialmente en los enchufes y en el tomacorriente del aparato.
6. No lo instale cerca de fuentes de calor como radiadores, rejillas de calefacción, estufas u otros aparatos (incluyendo amplificadores) que generen calor.
7. No anule el propósito de seguridad del enchufe polarizado o del tipo con toma de tierra. Un enchufe polarizado tiene dos clavijas, una más ancha que la otra (solo para EE. UU. y Canadá). Un enchufe con toma de tierra tiene dos clavijas y una tercera clavija de toma de tierra. La clavija ancha o la tercera clavija se proporcionan para su seguridad. Si el enchufe suministrado no encaja en su toma de corriente, consulte a un electricista para reemplazar la toma obsoleta.
8. Proteja el cable de alimentación contra daños, especialmente en los enchufes y en el tomacorriente del aparato.
9. Utilice solo accesorios y accesorios recomendados por el fabricante.



10. Utilice solo carritos, soportes, trípodes, soportes o mesas especificados. Tenga cuidado para evitar que el carro/ combinación de aparatos se vuelque al moverlo.

11. Desenchufe durante tormentas o si no se utiliza durante un largo período.
12. Solo utilice personal cualificado para el servicio, especialmente después de daños.
13. El aparato con terminal de puesta a tierra protectora debe conectarse a un tomacorriente de red con una conexión de puesta a tierra protectora.
14. Cuando se utilice el enchufe de red o un acoplador de aparatos como dispositivo de desconexión, el dispositivo de desconexión debe seguir siendo fácilmente operable.

15. Evite la instalación en espacios confinados como estanterías.

16. No coloque fuentes de llama desnuda, como velas encendidas, en el aparato.

17. Rango de temperatura de funcionamiento de 5° a 35°C (41° a 95°F).

**18. Advertencia**

- El reemplazo de una batería por un tipo incorrecto puede anular una protección.
- Tirar una batería al fuego o en un horno caliente, o aplastar o cortar mecánicamente una batería puede provocar una explosión.
- Dejar una batería en un entorno circundante de temperatura extremadamente alta puede provocar una explosión o la fuga de líquido o gas inflamable.
- Una batería sometida a una presión de aire extremadamente baja puede provocar una explosión o una fuga de líquido o gas inflamable.
- Se debe prestar atención a los aspectos ambientales
- La batería debe cargarse regularmente. No la deje en un estado descargado, ya que esto podría acortar la vida útil de la batería.
- Las baterías (paquete de baterías o baterías instaladas) no deben exponerse a calor excesivo, como la luz solar, el fuego u otros similares

NEGACIÓN LEGAL

Music Tribe no admite ningún tipo de responsabilidad por cualquier daño o pérdida que pudiera sufrir cualquier persona por confiar total o parcialmente en la descripciones, fotografías o afirmaciones contenidas en este documento. Las especificaciones técnicas, imágenes y otras informaciones contenidas en este documento están sujetas a modificaciones sin previo aviso. Todas las marcas comerciales que aparecen aquí son propiedad de sus respectivos dueños. Midas, Klark Teknik, Lab Gruppen, Lake, Tannoy, Turbosound, TC Electronic, TC Helicon, Behringer, Bugera, Aston Microphones y Coolaudio son marcas comerciales o marcas registradas de Music Tribe Global Brands Ltd. © Music Tribe Global Brands Ltd. 2024 Reservados todos los derechos.

GARANTÍA LIMITADA

Si quiere conocer los detalles y condiciones aplicables de la garantía así como información adicional sobre la Garantía limitada de Music Tribe, consulte online toda la información en la web community.musictribe.com/support.

FR

Consignes de sécurité

Les points repérés par ce symbole portent une tension électrique suffisante pour constituer un risque d'électrocution.

Utilisez uniquement des câbles d'enceintes professionnels de haute qualité avec fiches Jack mono 6,35 mm ou fiches à verrouillages déjà installées. Toute autre installation ou modification doit être effectuée uniquement par un personnel qualifié.



Ce symbole avertit de la présence d'une tension dangereuse et non isolée à l'intérieur de l'appareil - elle peut provoquer des chocs électriques.

**Attention**

Ce symbol signale les consignes d'utilisation et d'entretien importantes dans la documentation fournie. Lisez les consignes de sécurité du manuel d'utilisation de l'appareil.

**Attention**

Pour éviter tout risque de choc électrique, ne pas ouvrir le capot de l'appareil ni démonter le panneau arrière. L'intérieur de l'appareil ne possède aucun élément réparable par l'utilisateur. Laisser toute réparation à un professionnel qualifié.

**Attention**

Pour réduire les risques de feu et de choc électrique, n'exposez pas cet appareil à la pluie, à la moisissure, aux gouttes ou aux éclaboussures. Ne posez pas de récipient contenant un liquide sur l'appareil (un vase par exemple).

**Attention**

Ces consignes de sécurité et d'entretien sont destinées à un personnel qualifié. Pour éviter tout risque de choc électrique, n'effectuez aucune réparation sur l'appareil qui ne soit décrite par le manuel d'utilisation. Les éventuelles réparations doivent être effectuées uniquement par un technicien spécialisé.

**Avertissement**

Veuillez vous référer aux informations situées à l'extérieur du boîtier inférieur pour obtenir les renseignements électriques et de sécurité avant d'installer ou d'utiliser l'appareil.

1. Veuillez lire et suivre toutes les instructions et avertissements.
2. Éloignez l'appareil de l'eau (sauf pour les produits conçus pour une utilisation en extérieur).
3. Nettoyez uniquement avec un chiffon sec.
4. Ne bloquez pas les ouvertures de ventilation. N'installez pas dans un espace confiné. Installez uniquement selon les instructions du fabricant.

EN

 
ES

FR


B1X Hook-up

EN Step 1: Hook-Up

Singer-songwriter hookup with a smartphone streaming audio over Bluetooth.

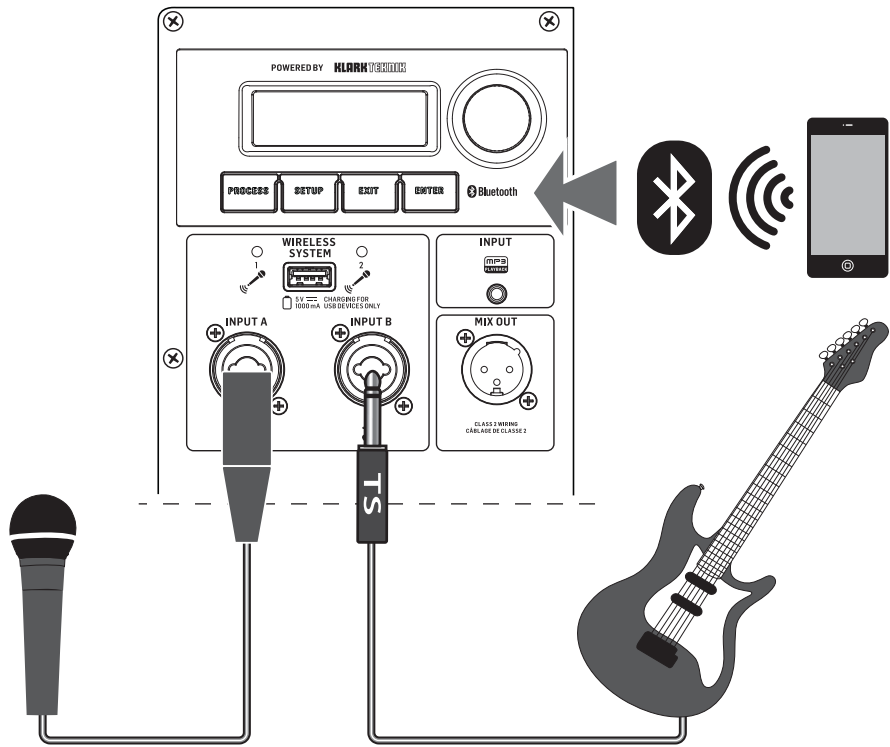


 Smartphone streaming audio over Bluetooth with Behringer wireless microphones.

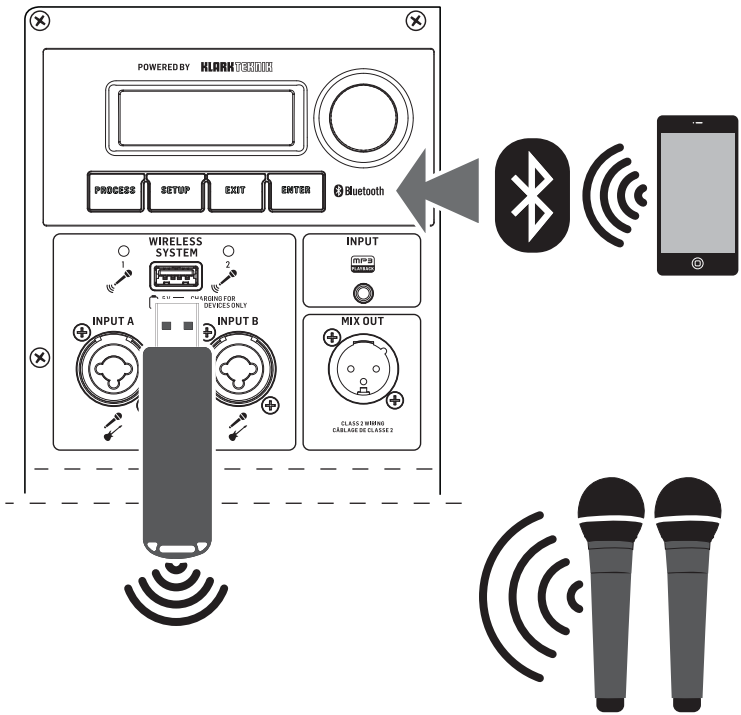

B1X Controls

 EN Step 2: Controls

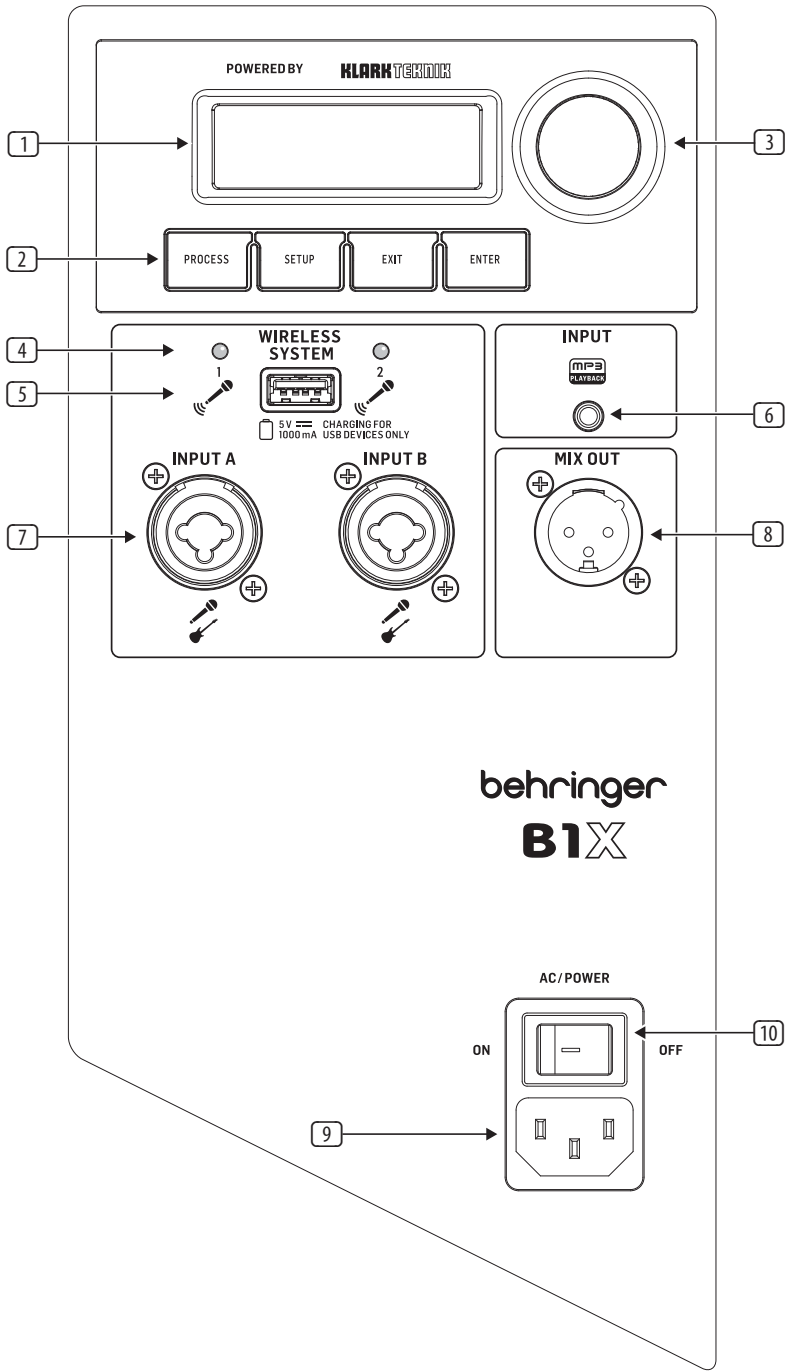


1. **LCD SCREEN** - displays the current DSP module and parameter settings.
2. **DISPLAY MENU BUTTONS** - use with the display to select various menu pages.
3. **ENCODER KNOB** - controls volume when the default DSP menu is active. Press the encoder knob to access DSP sub-menus and parameters. When the sub-menus are active, rotate the knob to change parameters.
4. **WIRELESS SYSTEM LEDs** - indicate wireless microphone signal input.
5. **WIRELESS SYSTEM USB** - input accepts only the Behringer wireless microphone receiver. This port can also be used to charge USB devices including cell phones.
NOTE: The wireless USB input works in parallel with the INPUT A/B analog inputs, which means the wireless microphone signal can be heard at the same time as audio coming in through the INPUT A/B connections. We recommend you unplug the INPUT A/B connections to hear the wireless microphone signal alone.
6. **INPUT** - 3.5 mm stereo input jack.
7. **INPUT A/B** - combination jacks accept input signals over XLR balanced, 1/4" TRS balanced, or 1/4" TS unbalanced connectors.
8. **MIX OUTPUT** - jack sends a combined signal from all inputs (INPUT A/B jacks, wireless microphone, and Bluetooth) out over a balanced XLR connection.
9. **POWER SOURCE** - jack accepts the included IEC power cord. Only use the supplied power cord.
10. **AC/POWER** - switch turns the unit off and on. The B1X will run on AC power if the power cord is connected to a live AC power source, or it will run on internal battery power.

B1X Getting started

EN Step 3: Getting started

 - 1** Connect the B1X to a power outlet by using the included IEC power cord. This will also charge up the internal battery.
- 2** Connect all analog microphone and/or instrument cables to their respective input jacks. Make sure all outboard audio gear is switched off for now.
- 3** Power up the B1X by pressing the AC/POWER switch to the "ON" position. The startup screen will appear on the LCD display. If the AC power cord is not connected, the B1X will run on internal battery power.

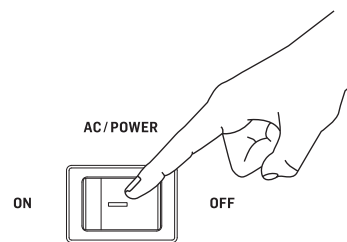


- 4** Reduce the volume by rotating the ENCODER KNOB counter-clockwise until the VOLUME setting shows "MUTE" on the LCD screen.



- 5** Mute all audio inputs by going to the GAIN screen and reducing the gain for each input with the ENCODER KNOB until each input displays the "Mute" setting.



 - 6** If you are using Behringer wireless microphones, plug the wireless dongle into the WIRELESS SYSTEM USB input. The WIRELESS SYSTEM LEDs will light up when the wireless microphones become active.

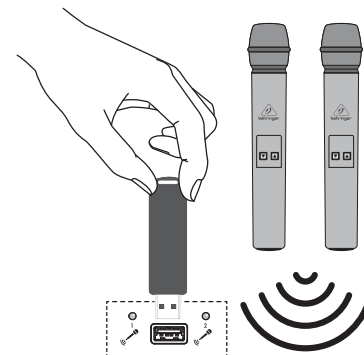

- 7** Power up any outboard audio gear connected to the B1X.
- 8** Raise the volume back up to a low-to-medium setting in the VOLUME screen to begin setting input levels.



 
- 9** Set microphone levels by going back to the INPUT screen. Speak or sing into each microphone while raising each mic's respective gain level (A or B) with the ENCODER KNOB until you find a comfortable gain level that does not distort the audio signal. The level indicator bar will help to find a suitable input gain. Please avoid clipping the input signal.



- 10** If you intend to stream Bluetooth audio, go to the Bluetooth Streaming section of this Quick Start Guide and follow the setup instructions.

- 11** Set Bluetooth levels by going to the GAIN screen and raising/lowering the BT gain setting until you find comfortable level settings. Do not forget to turn on the volume on the sending BT device.

- 12** Go to the MODE screen and choose an equalization preset that suits your needs (Music, Live, Speech or Club).





- 13** Go to the EQ screen and adjust the Bass, Mid and Treble settings if you wish to make your own adjustments.



- 14** Make final volume adjustments by going to the VOLUME screen and rotating the ENCODER KNOB until you find the desired final volume level.

  - 15** The POSIT. Menu allows you to select the speaker position from Stand, Stand-Wall, Stand-Corner, Floor, Floor-wall, and Floor-Corner.



- 16** Use the SETUP Menu to rename the speaker. Rotate and press the ENCODER KNOB to select NAME, rotate it to select the required letters, and press to select each letter. Select the 'return' (just before A) to finish.



- 17** Use the SETUP Menu to LOCK the speaker settings with a password, to prevent any changes being made after the speaker has been set up. Rotate and press the ENCODER KNOB to select LOCK, rotate it to select the letters, and press to select each letter. Select the 'return' (just before A) to finish.



Bluetooth Connection

EN

To stream audio from a Bluetooth-enabled device, you will need at least one B1X speaker and an iPad*/iPhone/Android*/Windows* device with basic Bluetooth connectivity. With a streaming-only Bluetooth connection, all related B1X DSP functions must still be controlled directly from the B1X rear panel via the rotary encoder.

For Apple* iOS or Android devices, you can also download our dedicated Behringer Show Mix app from the App Store. The app allows you to fully control a single or multiple B1X speakers, including all DSP functions, remotely from your iOS or Android device (see “Show Mix App Control” on the next pages for more information).

*iPad and Apple are trademarks of Apple Inc. Android is a trademark of Google Inc. Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

Bluetooth Streaming

To stream Bluetooth audio with any Bluetooth device (iPad/iPhone/Android/Windows, etc.):

Single Speaker Operation

1. Enable Bluetooth on your remote device.
2. Switch on your B1X speaker and minimize the volume.
3. Select “Pair device” from the B1X speaker’s Bluetooth menu.



4. Check that your remote device is searching for a connection.
5. Once your device detects the B1X speaker, select the B1X speaker from your remote device’s menu (e.g., “Behringer B1X”).
6. Wait until the remote device shows an active connection, and then check the speaker’s Bluetooth menu, which should display the name of the remote device (e.g., “Paul iPad”).



7. Bluetooth music can now be streamed to your B1X speaker. The stereo signal will automatically mix down to mono.
8. The B1X speaker will display the Bluetooth indicator on the main, top-level DSP screen. It flashes on an off during Pairing.



Two Speaker Operation

1. Complete the steps above to connect the first speaker to Bluetooth audio.
2. Use the BT “Link Speaker” menu on the first speaker to select Stereo Master.



3. Switch on the second speaker, and use its BT “Link Speaker” menu to select Stereo Slave.



4. Wait for the speakers to link.
5. Once the linking process is complete, the MASTER speaker will be the main Bluetooth connection to your device. Any SLAVE speakers will receive the Bluetooth audio stream from the MASTER speaker.
6. The MASTER and SLAVE connection will be indicated by a small M or an S on the main display screens.



7. As the Bluetooth audio stream received by all speakers is stereo, use the MIXER menu of each speaker to adjust the left and right BT levels. For example, if you want your MASTER speaker to play the Left audio from Bluetooth, you can MUTE the BT Right channel. If you want a SLAVE to be a Right channel, MUTE the BT Left channel using that speaker's MIXER menu.



Party Operation

Multiple B1X speakers can be linked in Party Mode, up to a maximum of 8 speakers.

1. Complete the steps above to connect the first speaker to Bluetooth audio.
2. Use the BT “Link Speaker” menu on the first speaker to select Party Slave.



3. Switch on the next speaker, and use its BT “Link Speaker” menu to select Party Master.



4. Wait for the speakers to link.
5. Once the linking process is complete, the Party MASTER speaker will be the main Bluetooth connection to your device. Any Party SLAVE speakers will receive the Bluetooth audio stream from the Party MASTER speaker.
6. The MASTER and SLAVE connection will be indicated by a small M or an S on the main display screens. Another icon appears if the B1X is controlled by the Show Mix App.



7. As the Bluetooth audio stream received by all speakers is stereo, use the MIXER menu of each speaker to adjust the left and right BT levels. For example, if you want your MASTER speaker to play the Left audio from Bluetooth, you can MUTE the BT Right channel. If you want a SLAVE to be a Right channel, MUTE the BT Left channel using that speaker's MIXER menu.



Show Mix APP Control

Setting Up the Show Mix App Connection

Note: Please download the latest version of the Show Mix App, as there may be differences between the latest version and the details presented here. If these QR codes do not work, please visit the Behringer product page to download the Show Mix App.

 
 
 
- Power on the first speaker
- Connect to the speaker via Bluetooth
- Start the Show Mix app on the IOS/Android device
- Check that the Show Mix app is connected and functioning with the speaker
- Repeat this for all B1X speakers. The App connects your device directly to each of the speakers.



Scan for iOS app



Scan for Android app

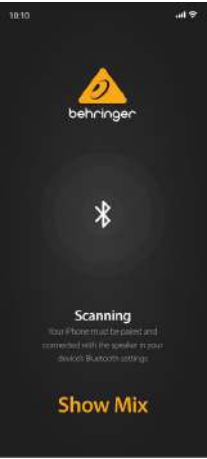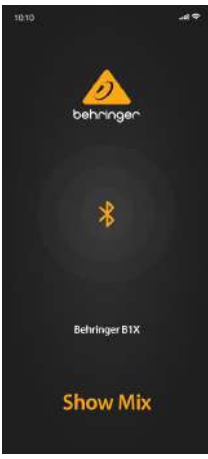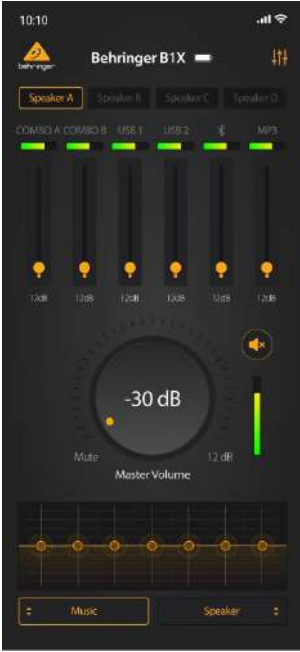Scanning for B1X	Connected to B1X	Main Page	Control Options Page
			

Using the Show Mix App

Show Mix allows you to do the following:

 
1. Switch between Speakers.
2. Adjust the levels of each input.
3. Adjust the Master volume.
4. Select the Mode from Music, Live, Speech, Club
5. Select the speaker position from Stand, Stand-Wall, Stand-Corner, Floor, Floor-Wall, Floor-Corner
6. For further control options, such as EQ, FX, Mixer, and Delay, select the small mixer logo in the top right of the main page to bring up the Control Options page.




Firmware Update via App

Show Mix allows you to update your B1X firmware:

1. The firmware version is displayed at the bottom of the Control Options page.
2. Make sure that your device has good internet access, and the battery power is good before beginning any firmware updates.

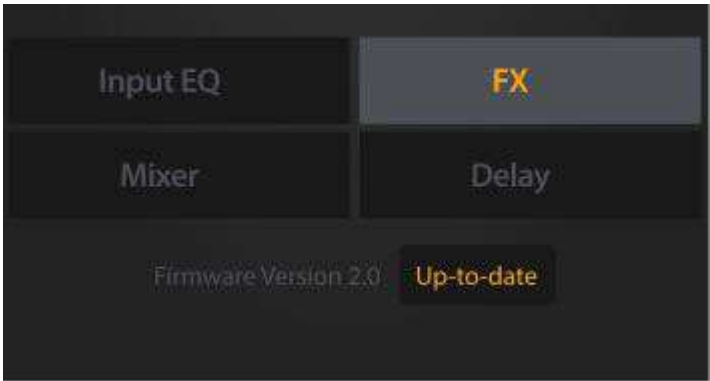

 3. If the firmware is not up to date, click on the highlighted box to download the latest version.
4. The update progress will be displayed on the app and the B1X speaker's LCD screen.



DSP Menu

Menu (Key Press)	Sub-Menu	Screen	Function
		MAIN SCREEN	Displays level indicators and model name. The left level indicator shows the level for all inputs, while the right level indicator shows the output level. Displays the following Bluetooth* status information: - Bluetooth symbol indicates connection to audio and/or remote control device (iPhone*, etc.). “M” indicates that the remote Show Mix app is connected. “S” indicates audio streaming is connected. “M” or “S” indicates that the speaker is linked to another B1X speaker as MASTER “M” or SLAVE “S” Rotate the ENCODER KNOB to adjust the output volume. Press the ENCODER KNOB enter the last used sub-menu.
		VOLUME	Rotate the ENCODER KNOB to change the output volume.
		GAIN	Sets input mixer level for analogue input A and B, USB Mic, Bluetooth and MP3
		EQ (Equalisation)	Allows adjustment of three band equaliser with controls for bass, mid range and treble, as well as a high pass filter. Hi Pass setting: OFF, ON (90 Hz)
		MODE	Selects from 4 preset equalisation settings, depending on function and music type.
		POSIT. (Position)	Selects from 6 preset equalisation settings, depending on the position of speaker.
		FX	Selects different effects: Concert, Chamber, Ambience, Echo, Chorus, Pitch, Delay+Reverb, Chorus+ Reverb. Each has separate adjustable parameters. “A Mix” and “B Mix” refer to the percentage of “Wet” vs “Dry” signals.
		MIX	Allows you to adjust the Mix of the various input signals playing in the speaker, and to adjust the Mix playing out of the MIX output connector. Three common Mix presets are available for quick recall.
		DLY	Adjust the speaker delay by entering a value in Ms, Meters, or Feet.
		PRST	The preset menu allows you to save up to 10 of your favourite settings and load them up easily.

Menu (Key Press)	Sub-Menu	Screen	Function
		BT (Bluetooth)	Lets you pair the speaker with mobile Bluetooth devices and link to another B1X speaker as MASTER / SLAVE.
		SETUP	Sets the speaker name, backlight On or Sleep, LCD contrast 0-5, enter a device-lock password, and factory reset.
		INFO	Displays model and firmware information.
		Firmware Update	Indicates the device is updating firmware from the Show Mix app software via Bluetooth.

*iPhone is a trademark of Apple Inc. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks is under license.

EN

Specifications

Amplifier	
Maximum output power	250 W*
Type	Class-D
Protection	Short circuit, open circuit, thermal
Controls	
Hardware	Rotary push-encoder
Software	Apple iOS / Android interface via Bluetooth
Loudspeaker / System Data	
Woofers	1 x 6.5"
Tweeter	3 x 2" full range
Frequency response	50 Hz – 20 kHz (±3 dB)
Maximum SPL, 1m	108 dB
Crossover	2-way, active
Crossoverfrequency	700 Hz
Limiter	Independent HF, LF
Audio Connections	
Inputs	2 x XLR / ¼" TRS combo jacks
Impedance	TRS 0.83 MΩ, XLR balanced 2.5 kΩ
Sensitivity	0 dBu (input gain and master set to 0)
Max. input level	+10 dBu
Aux in	10 kΩ, unbalanced
Output	1 x XLR balanced
Impedance	470 Ω
Max. output level	+10 dBu
Digital Signal Processor (DSP)	
Display	LCD 128 x 32, amber backlit
Factory EQ presets	Positioning, sound mode
FX Effects	Concert, Chamber, Ambience, Echo, Chorus, and more
Protection	Lockout function for all settings
Wireless System	
USB dongle	USB socket accepts signals from 2 independent Behringer ULM mics
Signal indicator LED	2 (green)

Bluetooth**	
Frequency range	2402 MHz ~ 2480 MHz
Channel number	79
Version	Bluetooth 5.0 compliant
Maximum Output Power	≤3.16 dBm
Compatibility	Supports GATT, A2DP 1.2 profiles
Maximum communication range	30 m (without interference)
Connectivity	True Wireless Stereo (TWS) and multiple speakers link
Battery	
	Lithium, 5800 mAh, 14.4 V
Optional Accessories	
	B1 Backpack
Power Supply / Voltage (Fuses)	
Voltage	100-240 V~, 50/60 Hz (fuse T2 AL/250 VAC internal)
Power consumption @ ¼ max power	70 W
Mains connection	Standard IEC receptacle
Dimension / Weight	
Dimensions (H x W x D)	362 x 240 x 290 mm (14.3 x 9.4 x 11.4")
Weight	7.5 kg (16.5 lbs)

*Independent of limiters and driver protection circuits.
**The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such marks by Music Tribe is under license.

Dados Técnicos

Bluetooth**	
Rango de frecuencia	2402 MHz ~ 2480 MHz
Número de canal	79
Versión	Bluetooth 5.0 compliant
Potencia de salida máxima	≤3.16 dBm
Compatibilidad	Supports GATT, A2DP 1.2 profiles
Alcance máximo de comunicación	30 m (without interference)
Conectividad	True Wireless Stereo (TWS) and multiple speakers link

Caractéristiques

Techniques

Bluetooth**	
Plage de fréquence	2402 MHz ~ 2480 MHz
Numéro de canal	79
Version	Bluetooth 5.0 compliant
Puissance de sortie maximale	≤3.16 dBm
Compatibilité	Supports GATT, A2DP 1.2 profiles
Portée maximale de communication	30 m (without interference)
Connectivité	True Wireless Stereo (TWS) and multiple speakers link

Technische Daten

Bluetooth**	
Frequenzbereich	2402 MHz ~ 2480 MHz
Kanalnummer	79
Version	Bluetooth 5.0 compliant
Maximale Ausgangsleistung	≤3.16 dBm
Kompatibilität	Supports GATT, A2DP 1.2 profiles
Maximale Kommunikationsreichweite	30 m (without interference)
Konnektivität	True Wireless Stereo (TWS) and multiple speakers link

*Independent of limiters and driver protection circuits.
**The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such marks by Music Tribe is under license.

Dados Técnicos

Bluetooth**	
Faixa de frequência	2402 MHz ~ 2480 MHz
Número do canal	79
Versão	Bluetooth 5.0 compliant
Potência de saída máxima	≤3.16 dBm
Compatibilidade	Supports GATT, A2DP 1.2 profiles
Alcance máximo de comunicação	30 m (without interference)
Conectividade	True Wireless Stereo (TWS) and multiple speakers link

Specifiche

Bluetooth**	
Gamma di frequenza	2402 MHz ~ 2480 MHz
Numero del canale	79
Versione	Bluetooth 5.0 compliant
Potenza di uscita massima	≤3.16 dBm
Compatibilità	Supports GATT, A2DP 1.2 profiles
Portata massima di comunicazione	30 m (without interference)
Connettività	True Wireless Stereo (TWS) and multiple speakers link

Specificaties

Bluetooth**	
Frequentiebereik	2402 MHz ~ 2480 MHz
Kanaalnummer	79
Versie	Bluetooth 5.0 compliant
Maximale uitgangsvermogen	≤3.16 dBm
Compatibiliteit	Supports GATT, A2DP 1.2 profiles
Maximale communicatiebereik	30 m (without interference)
Connectiviteit	True Wireless Stereo (TWS) and multiple speakers link

ES

FR

DE

PT

IT

NL

Other important information

EN Important information

1. Register online. Please register your new Music Tribe equipment right after you purchase it by visiting musictribe.com. Registering your purchase using our simple online form helps us to process your repair claims more quickly and efficiently. Also, read the terms and conditions of our warranty, if applicable.

2. Malfunction. Should your Music Tribe Authorized Reseller not be located in your vicinity, you may contact the Music Tribe Authorized Fulfiller for your country listed under “Support” at musictribe.com. Should your country not be listed, please check if your problem can be dealt with by our “Online Support” which may also be found under “Support” at musictribe.com. Alternatively, please submit an online warranty claim at musictribe.com BEFORE returning the product.

3. Power Connections. Before plugging the unit into a power socket, please make sure you are using the correct mains voltage for your particular model. Faulty fuses must be replaced with fuses of the same type and rating without exception.

ES Aspectos importantes

1. Registro online. Le recomendamos que registre su nuevo aparato Music Tribe justo después de su compra accediendo a la página web musictribe.com. El registro de su compra a través de nuestro sencillo sistema online nos ayudará a resolver cualquier incidencia que se presente a la mayor brevedad posible. Además, aproveche para leer los términos y condiciones de nuestra garantía, si es aplicable en su caso.

2. Averías. En el caso de que no exista un distribuidor Music Tribe en las inmediaciones, puede ponerse en contacto con el distribuidor Music Tribe de su país, que encontrará dentro del apartado “Support” de nuestra página web musictribe.com. En caso de que su país no aparezca en ese listado, acceda a la sección “Online Support” (que también encontrará dentro del apartado “Support” de nuestra página web) y compruebe si su problema aparece descrito y solucionado allí. De forma alternativa, envíenos a través de la página web una solicitud online de soporte en periodo de garantía ANTES de devolvernos el aparato.

3. Conexiones de corriente. Antes de enchufar este aparato a una salida de corriente, asegúrese de que dicha salida sea del voltaje adecuado para su modelo concreto. En caso de que deba sustituir un fusible quemado, deberá hacerlo por otro de idénticas especificaciones, sin excepción.

FR Informations importantes

1. Enregistrez-vous en ligne. Prenez le temps d'enregistrer votre produit Music Tribe aussi vite que possible sur le site Internet musictribe.com. Le fait d'enregistrer le produit en ligne nous permet de gérer les réparations plus rapidement et plus efficacement. Prenez également le temps de lire les termes et conditions de notre garantie.

2. Dysfonctionnement. Si vous n'avez pas de revendeur Music Tribe près de chez vous, contactez le distributeur Music Tribe de votre pays : consultez la liste des distributeurs de votre pays dans la page “Support” de notre site Internet musictribe.com. Si votre pays n'est pas dans la liste, essayez de résoudre votre problème avec notre “aide en ligne” que vous trouverez également dans la section “Support” du site musictribe.com. Vous pouvez également nous faire parvenir directement votre demande de réparation sous garantie par Internet sur le site musictribe.com AVANT de nous renvoyer le produit.

3. Raccordement au secteur. Avant de relier cet équipement au secteur, assurez-vous que la tension secteur de votre région soit compatible avec l'appareil. Veillez à remplacer les fusibles uniquement par des modèles exactement de même taille et de même valeur électrique — sans aucune exception.

DE Weitere wichtige Informationen

1. Online registrieren. Bitte registrieren Sie Ihr neues Music Tribe-Gerät direkt nach dem Kauf auf der website musictribe.com. Wenn Sie Ihren Kauf mit unserem einfachen online Formular registrieren, können wir Ihre Reparaturansprüche schneller und effizienter bearbeiten. Lesen Sie bitte auch unsere Garantiebedingungen, falls zutreffend.

2. Funktionsfehler. Sollte sich kein Music Tribe Händler in Ihrer Nähe befinden, können Sie den Music Tribe Vertrieb Ihres Landes kontaktieren, der auf musictribe.com unter „Support“ aufgeführt ist. Sollte Ihr Land nicht aufgelistet sein, prüfen Sie bitte, ob Ihr Problem von unserem „Online Support“ gelöst werden kann, den Sie ebenfalls auf musictribe.com unter „Support“ finden. Alternativ reichen Sie bitte Ihren Garantieanspruch online auf musictribe.com ein, BEVOR Sie das Produkt zurücksenden.

3. Stromanschluss. Bevor Sie das Gerät an eine Netzsteckdose anschließen, prüfen Sie bitte, ob Sie die korrekte Netzspannung für Ihr spezielles Modell verwenden. Fehlerhafte Sicherungen müssen ausnahmslos durch Sicherungen des gleichen Typs und Nennwerts ersetzt werden.

PT Outras Informações Importantes

1. Registre-se online. Por favor, registre seu novo equipamento Music Tribe logo após a compra visitando o site musictribe.com Registrar sua compra usando nosso simples formulário online nos ajuda a processar seus pedidos de reparos com maior rapidez e eficiência. Além disso, leia nossos termos e condições de garantia, caso seja necessário.

2. Funcionamento Defeituoso. Caso seu fornecedor Music Tribe não esteja localizado nas proximidades, você pode contatar um distribuidor Music Tribe para o seu país listado abaixo de “Suporte” em musictribe.com. Se seu país não estiver na lista, favor checar se seu problema pode ser resolvido com o nosso “Suporte Online” que também pode ser achado abaixo de “Suporte” em musictribe.com. Alternativamente, favor enviar uma solicitação de garantia online em musictribe.com ANTES da devolução do produto.

3. Ligações. Antes de ligar a unidade à tomada, assegure-se de que está a utilizar a voltagem correcta para o modelo em questão. Os fusíveis com defeito terão de ser substituídos, sem qualquer excepção, por fusíveis do mesmo tipo e corrente nominal.

IT Informazioni importanti

1. Registratevi online. Vi invitiamo a registrare il nuovo apparecchio Music Tribe subito dopo averlo acquistato visitando musictribe.com. La registrazione dell'acquisto tramite il nostro semplice modulo online ci consente di elaborare le richieste di riparazione in modo più rapido ed efficiente. Leggete anche i termini e le condizioni della nostra garanzia, qualora applicabile.

2. Malfunzionamento. Nel caso in cui il rivenditore autorizzato Music Tribe non si trovi nelle vostre vicinanze, potete contattare il Music Tribe Authorized Fulfiller per il vostro paese, elencato in “Support” @ musictribe.com. Se la vostra nazione non è elencata, controllate se il problema può essere risolto tramite il nostro “Online Support” che può anche essere trovato sotto “Support” @ musictribe.com. In alternativa, inviate una richiesta di garanzia online su musictribe.com PRIMA di restituire il prodotto.

3. Collegamento all'alimentazione. Prima di collegare l'unità a una presa di corrente, assicuratevi di utilizzare la tensione di rete corretta per il modello specifico. I fusibili guasti devono essere sostituiti, senza eccezioni, con fusibili dello stesso tipo e valore nominale.

NL Belangrijke informatie

1. Registreer online. Registreer uw nieuwe Music Tribe-apparaat direct nadat u deze hebt gekocht door naar musictribe.com te gaan. Door uw aankoop te registreren via ons eenvoudige online formulier, kunnen wij uw reparatieclaims sneller en efficiënter verwerken. Lees ook de voorwaarden van onze garantie, indien van toepassing.

2. Storing. Mocht uw door Music Tribe geautoriseerde wederverkoper niet bij u in de buurt zijn gevestigd, dan kunt u contact opnemen met de door Music Tribe Authorized Fulfiller voor uw land vermeld onder “Support” op musictribe.com. Als uw land niet in de lijst staat, controleer dan of uw probleem kan worden opgelost door onze “Online Support”, die u ook kunt vinden onder “Support” op musictribe.com. U kunt ook een online garantieclaim indienen op musictribe.com VOORDAT u het product retourneert.

3. Stroomaansluitingen. Voordat u het apparaat op een stopcontact aansluit, moet u ervoor zorgen dat u de juiste netspanning voor uw specifieke model gebruikt. Defecte zekeringen moeten zonder uitzondering worden vervangen door zekeringen van hetzelfde type en dezelfde waarde.

SE Viktig information

1. Registrera online. Registrera din nya Music Tribe-utrustning direkt efter att du köpt den genom att besöka musictribe.com. Att registrera ditt köp med vårt enkla onlineformulär hjälper oss att behandla dina reparationsanspråk snabbare och mer effektivt. Läs också villkoren i vår garanti, om tillämpligt.

2. Fel. Om din Music Tribe-auktorerade återförsäljare inte finns i din närhet kan du kontakta Music Tribe Authorized Fulfiller för ditt land listat under “Support” på musictribe.com. Om ditt land inte är listat, kontrollera om ditt problem kan hanteras av vår “Onlinesupport” som också finns under “Support” på musictribe.com. Alternativt kan du skicka in ett online-garantianspråk på musictribe.com INNAN du returnerar produkten.

3. Strömanslutningar. Innan du ansluter enheten till ett eluttag, se till att du använder rätt nätspanning för just din modell. Felaktiga säkringar måste bytas ut mot säkringar av samma typ och märkning utan undantag.

PL Ważna informacja

1. Zarejestrować online. Zarejestruj swój nowy sprzęt Music Tribe zaraz po zakupie na stronie musictribe.com. Zarejestrowanie zakupu za pomocą naszego prostego formularza online pomaga nam szybciej i efektywniej rozpatrywać roszczenia dotyczące naprawy. Przeczytaj również warunki naszej gwarancji, jeśli dotyczy.

2. Awaria. Jeśli Twój autoryzowany sprzedawca Music Tribe nie znajduje się w pobliżu, możesz skontaktować się z autoryzowanym dostawcą Music Tribe dla swojego kraju, wymienionym w sekcji „Wsparcie” na stronie musictribe.com. Jeśli Twojego kraju nie ma na liście, sprawdź, czy Twój problem może zostać rozwiązany przez nasze „Wsparcie online”, które można również znaleźć w sekcji „Wsparcie” na stronie musictribe.com. Alternatywnie, prześlij zgłoszenie gwarancyjne online na musictribe.com PRZED zwrotem produktu.

3. Połączenia zasilania. Przed podłączeniem urządzenia do gniazdka sieciowego upewnij się, że używasz odpowiedniego napięcia sieciowego dla danego modelu. Wadliwe bezpieczniki należy bez wyjątku wymienić na bezpieczniki tego samego typu i wartości.

JP その他の重要な情報

1. ヒューズの格納部 / 電圧の選択: ユニットをパワーソケットに接続する前に、各モデルに対応した正しい主電源を使用していることを確認してください。ユニットによっては、230 V と 120 V の 2 つの違うポジションを切り替えて使う、ヒューズの格納部を備えているものがあります。正しくない値のヒューズは、絶対に適切な値のヒューズに交換されている必要があります。

2. 故障: Music Tribe ディーラーがお客様のお近くにないときは、musictribe.com の “Support” 内に列記されている、お客様の国の Music Tribe ディストリビューターにコンタクトすることができます。お客様の国がリストにない場合は、同じ musictribe.com の “Support” 内にある “Online Support” でお客様の問題が処理できないか、チェックしてみてください。あるいは、商品を返送する前に、musictribe.com で、オンラインの保証請求を要請してください。

3. 電源接続: 電源ソケットに電源コードを接続する前に、本製品に適切な電圧を使用していることをご確認ください。不具合が発生したヒューズは必ず電圧および電流、種類が同じヒューズに交換する必要があります。

EN

ES

FR

DE

PT

IT

NL

SE

PL

JP

CN

FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION

Behringer

B1X

Responsible Party Name: **Music Tribe Commercial NV Inc.**

Address: **122 E. 42nd St.1,
8th Floor NY, NY 10168,
United States**

Email Address: **legal@musictribe.com**

B1X

Contains Transmitter Module FCC ID: QWO-BTM983H

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Important information:

Changes or modifications to the equipment not expressly approved by Music Tribe can void the user's authority to use the equipment.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. Such modifications could void the user authority to operate the equipment.

FCC RF Radiation Exposure Statement:

- (1) This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- (2) This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 centimeters between the radiator and your body.

IC RF Radiation Exposure Statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Cet appareil est conforme à IC l'exposition aux rayonnements limites fixées pour un environnement non contrôlé. Cet appareil doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps. Cet transmetteur ne doit pas être co-situé ou opérant en liaison avec toute autre antenne ou transmetteur.



Hereby, Music Tribe declares that this product is in compliance with Directive 2014/53/EU, Directive 2014/30/EU, Directive 2014/35/EU, Directive 2011/65/EU and Amendment 2015/863/EU, Directive 2012/19/EU, Regulation 519/2012 REACH SVHC and Directive 1907/2006/EC.

Full text of EU DoC is available at <https://community.musictribe.com/>

EU Representative: Music Tribe Brands DK A/S
Address: Gammel Strand 44, DK-1202 København K, Denmark

UK Representative: Music Tribe Brands UK Ltd.
Address: 8th Floor, 20 Farringdon Street London EC4A 4AB, United Kingdom



Correct disposal of this product: This symbol indicates that this product must not be disposed of with household waste, according to the WEEE Directive (2012/19/EU) and your national law. This product should be taken to a collection center licensed for the recycling of waste electrical and electronic equipment (EEE). The mishandling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the efficient use of natural resources. For more information about where you can take your waste equipment for recycling, please contact your local city office, or your household waste collection service.

We Hear You