 


Product Structure

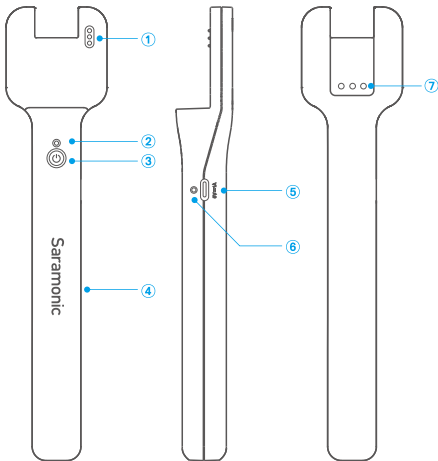

① Charging Contacts

② Power Indicator

| Status                     | Indicator                   |
|----------------------------|-----------------------------|
| Power ON                   | Static Blue                 |
| Low Battery                | Static Red                  |
| Ultral-low Battery Warning | Blinking Red for 10 Seconds |
| Power OFF                  | Light Off                   |

③ Power Button

Press and hold for 2 seconds to power ON or OFF.

④ Handheld Holder

⑤ USB-C Charging Port


For charging the Blink900 HM using the included USB-C charging cable.

⑥ Charging Indicator

| Status               | Indicator  |
|----------------------|------------|
| Charging Blink900 HM | Static Red |
| Full Charged         | Light Off  |

⑦ Belt-clip Slot

 Quick Setup Guide

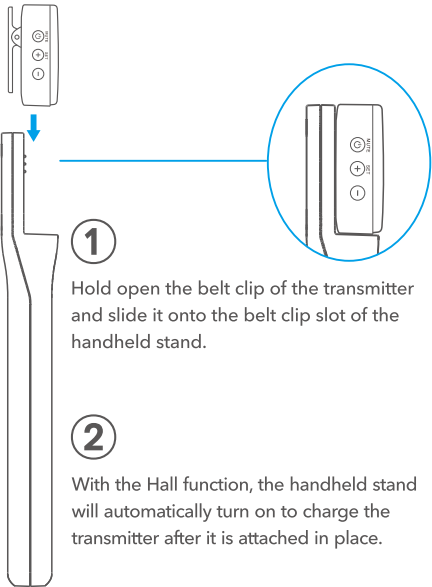

1

Hold open the belt clip of the transmitter and slide it onto the belt clip slot of the handheld stand.

2

 
With the Hall function, the handheld stand will automatically turn on to charge the transmitter after it is attached in place.

3

When the transmitter is fully charged, press and hold the power button for 2 seconds to turn off the handheld stand.

Note:

1. This handheld stand can work with Blink900 TX, Blink900 TX-TG or Blink900 TXR (sold separately).
2. If no transmitter is attached to the stand within 30 seconds of power ON, the Blink900 HM handheld stand will automatically power OFF.



Specifications

|                       |                                      |
|-----------------------|--------------------------------------|
| Power Capacity        | Built-in Li-ion Battery 3.7V/1100mAh |
| Charging Port         | USB-C                                |
| Charging Time         | Approx. 2 hours                      |
| Charging Times for TX | Approx. 2 times                      |
| Dimensions            | 7.7x1.71x0.87" (195.5x43.5x22mm)     |
| Weight                | Approx. 2.33oz (66g)                 |
| Operating Temperature | 0°C to 50°C                          |
| Storage Temperature   | -20°C to +55°C                       |

Packing Lists



Handheld Microphone Holder x1



Foam Windscreen x1

 


USB-C Charging Cable x1



Scan the QR code and follow us  
扫描微信关注枫笛公众号

产品结构

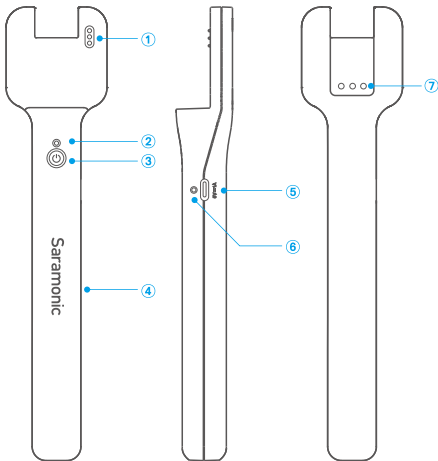

① 充电触点

② 电源指示灯

| 状态    | 指示灯     |
|-------|---------|
| 开机    | 蓝灯常亮    |
| 低电状态  | 红灯常亮    |
| 超低电警告 | 红灯闪烁10秒 |
| 关机    | 指示灯熄灭   |

③ 电源键

长按电源键2秒开/关机。

④ 手柄

⑤ Type-C充电口


使用随附的Type-C充电线给支架充电。

⑥ 充电指示灯

| 状态    | 指示灯  |
|-------|------|
| 支架充电中 | 红灯常亮 |
| 支架充满电 | 红灯熄灭 |

⑦ 背夹凹槽

 安装步骤

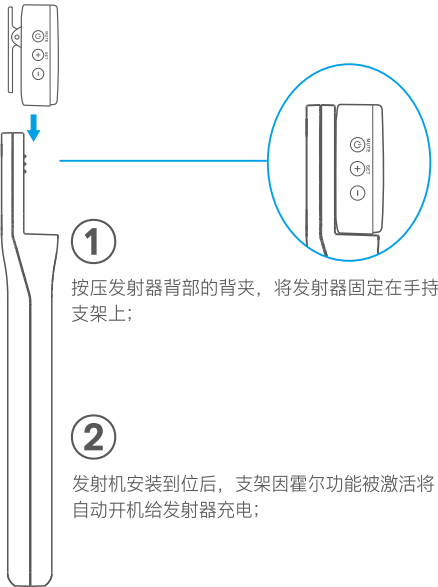

1

按压发射器背部的背夹，将发射器固定在手持支架上；

2

发射机安装到位后，支架因霍尔功能被激活将自动开机给发射器充电；

3

充电完毕后，长按支架电源键2秒关机即可。

注：

1. 该手持支架适配Blink900 TX、Blink900 TX-TG和Blink900 TXR无线发射器（另售）。
2. Blink900 HM手持支架在开机30秒内若无发射器安装，将自动关机。

参数

|            |                    |
|------------|--------------------|
| 电池规格       | 内置锂电池 3.7V/1100mAh |
| 充电接口       | Type-C             |
| 充电时长       | 约2小时               |
| 可给TX循环充电次数 | 约2次                |
| 尺寸         | 195.5x43.5x22mm    |
| 重量         | 66g                |
| 工作温度       | 0℃至50℃             |
| 贮存温度       | -20℃至+55℃          |

配件清单



For better recording experience, the application **SmartRecorder** is recommended.  
为获得更好的录制体验，推荐使用枫笛 Saramonic 自主研发应用程序 **SmartRecorder**。

Shenzhen Jiayz Photo Industrial., Ltd  
深圳市长丰影像器材有限公司

A16 Building, Intelligent Terminal Industrial Park of Silicon Valley  
Power, Guanlan, Longhua District, Shenzhen, China  
深圳市龙华区观澜街道大富工业区硅谷动力智能终端产业园A16栋