



ES925C6/DS5
ES925C12/DS5
ES925C15/DS5
ES925C18/DS5
ES925C21/DS5
ES925C24/DS5

User Manual
CARDIOID CONDENSER
MODULAR GOOSENECK MICROPHONE
WITH 5-PIN DESK STAND POWER MODULE



audio-technica

■ Introduction

Thank you for purchasing this product. Before using the product, read through the user manual to ensure that you will use the product correctly. Please keep this manual for future reference.

■ Features

- Modular microphone system comprised of an ES Series capsule, gooseneck assembly, and power module.
- RGB LEDs built into both the desk stand power module and gooseneck assembly indicate the on/off status of the microphone.
- Includes external control function for device control from the capacitive touch switch.
- The capacitive touch switch can be set to any of three operating modes: "touch-on/touch-off", "touch-to-talk" and "touch-to-mute".

■ Safety precautions

Although this product was designed to be used safely, failing to use it correctly may result in an accident. To ensure safety, observe all warnings and cautions while using the product.

■ Cautions for the product

- Do not subject the product to strong impact to avoid malfunction.
- Do not disassemble, modify or attempt to repair the product.
- Do not handle the product with wet hands to avoid electric shock or injury.
- Do not store the product under direct sunlight, near heating devices or in a hot, humid or dusty place.

■ Notes on use

- Do not swing or pull the product. Doing so may cause disconnection or damage.
- The circuitry in the microphone takes about 30 seconds to stabilize after power is supplied. You may hear some audio disturbance during startup.
- The connectors are equipped with a special RFI-shielding mechanism. If you remove or replace the connector, you may adversely affect the microphone's RFI immunity. The Audio-Technica Crimp Tool (ATCT) and shield parts are required to shorten the cable and reinstall the connector while maintaining the RFI immunity.
- Install the microphone on a flat, unobstructed mounting surface. Make sure that the sound source is not below the mounting surface.
- Depending on the surface finish of a table, the desk stand power module may leave marks on the table.
- Do not excessively bend the gooseneck assembly, rotate the ends of the capsule, or pull on them. Doing so may cause disconnection or malfunction.
- The product is a modular system comprised of a microphone element, gooseneck assembly and power module. Make sure the parts are firmly attached before use.
- Do not remove the rubber O-ring on the power module connecting part at the lower section of the gooseneck assembly.
- When attaching parts, remove the black cap on the capsule connecting part of the gooseneck assembly. **Do not remove the silicone part at the end of the capsule connecting part.**




■ Switch settings


To reduce low-frequency ambient noise (such as footsteps or air conditioning noise), room reverberation, and mechanically coupled vibrations as much as possible, turn on the low-cut filter switch (⎓) on the bottom of the power module.

■ Assembly

- 1.
- Insert the gooseneck assembly (c) while rotating it into the desk stand power module (d).
 - Tighten until it does not rotate, and use the hex wrench (h) to tighten the set screw (g) and set the gooseneck assembly in place.
 - Connect the capsule (b) to the gooseneck assembly, and attach the windscreen (a).
- * If the parts are not sufficiently tightened together, problems may occur such as the LED colors of the gooseneck assembly and power module not matching or sound is not output.

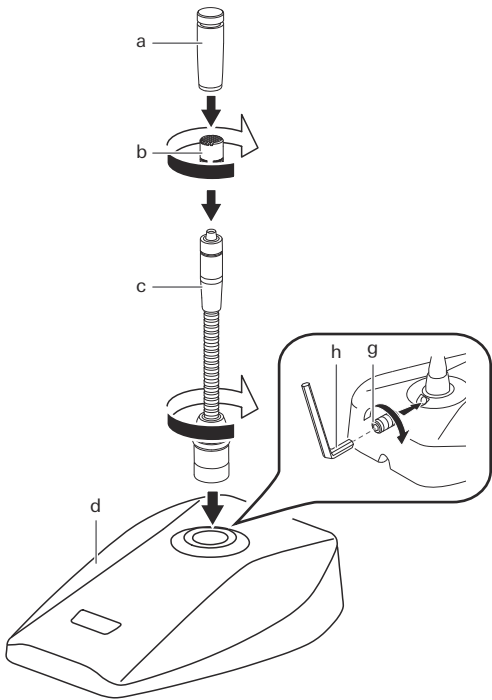



2. Connect the included cable to the connector (e) on the reverse side of the desk stand power module, and pass the cable through the wire slot (f).

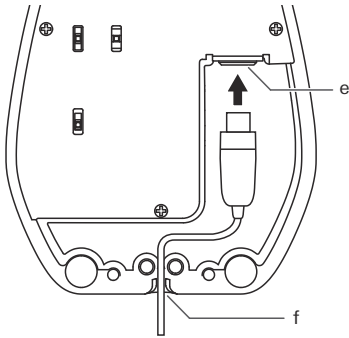




■ LED color

▼	1	2	3
OFF	RED	GREEN	YELLOW
4	5	6	7
BLUE	MAGENTA	CYAN	WHITE

■ Wiring

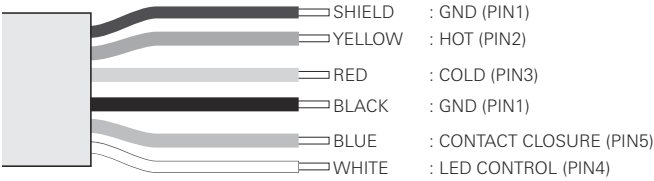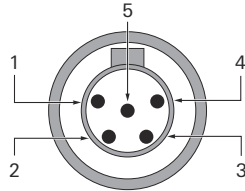

■ Switch setting and functions

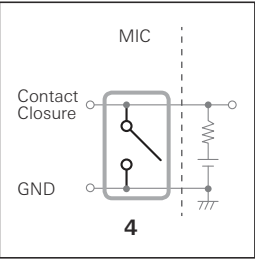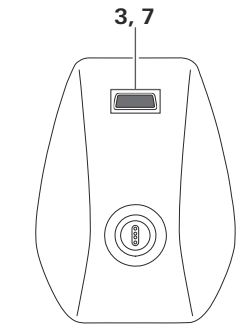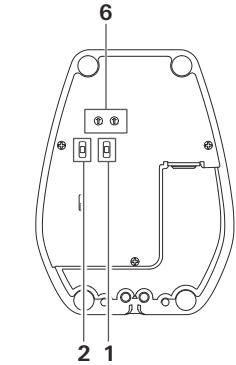


1. Control	2. Switch Function	3. Action	4. Contact closure status	5. Audio status	6. LED color	7. LED status
CONTROL LOCAL REMOTE LED REMOTE	SW.FUNCTION TOUCH ON/OFF MOM.ON MOM.OFF				MIC OFF MIC ON 	
					MIC OFF MIC ON 	
	SW.FUNCTION TOUCH ON/OFF MOM.ON MOM.OFF				MIC OFF MIC ON 	
					MIC OFF MIC ON 	
	SW.FUNCTION TOUCH ON/OFF MOM.ON MOM.OFF				MIC OFF MIC ON 	
					MIC OFF MIC ON 	
	SW.FUNCTION TOUCH ON/OFF MOM.ON MOM.OFF				MIC OFF MIC ON 	
					MIC OFF MIC ON 	
	SW.FUNCTION TOUCH ON/OFF MOM.ON MOM.OFF				MIC OFF MIC ON 	
CONTROL LOCAL REMOTE LED REMOTE	SW.FUNCTION TOUCH ON/OFF MOM.ON MOM.OFF				MIC OFF MIC ON 	
					MIC OFF MIC ON 	
	SW.FUNCTION TOUCH ON/OFF MOM.ON MOM.OFF				MIC OFF MIC ON 	
					MIC OFF MIC ON 	
	SW.FUNCTION TOUCH ON/OFF MOM.ON MOM.OFF				MIC OFF MIC ON 	
					MIC OFF MIC ON 	
	SW.FUNCTION TOUCH ON/OFF MOM.ON MOM.OFF				MIC OFF MIC ON 	
					MIC OFF MIC ON 	
	SW.FUNCTION TOUCH ON/OFF MOM.ON MOM.OFF				MIC OFF MIC ON 	
CONTROL LOCAL REMOTE LED REMOTE	SW.FUNCTION TOUCH ON/OFF MOM.ON MOM.OFF				MIC OFF MIC ON 	
					MIC OFF MIC ON 	
	SW.FUNCTION TOUCH ON/OFF MOM.ON MOM.OFF				MIC OFF MIC ON 	
					MIC OFF MIC ON 	
	SW.FUNCTION TOUCH ON/OFF MOM.ON MOM.OFF				MIC OFF MIC ON 	
					MIC OFF MIC ON 	
	SW.FUNCTION TOUCH ON/OFF MOM.ON MOM.OFF				MIC OFF MIC ON 	
					MIC OFF MIC ON 	
	SW.FUNCTION TOUCH ON/OFF MOM.ON MOM.OFF				MIC OFF MIC ON 	


■ Specifications

ES925Cx/DS5		x = 6/12/15/18/21/24
Element	Fixed-charge back plate, permanently polarized condenser	
Polar pattern	Cardioid	
Frequency response	30 - 20,000 Hz	
Low frequency roll-off	80 Hz, 18 dB/octave	
Open circuit sensitivity	-40 dB (10.0 mV) (0dB=1V/Pa, 1kHz)	
Impedance	130 ohms	
Maximum input sound level	140 dB SPL (1kHz at 1% THD)	
Dynamic range	112 dB (1kHz at Max SPL)	
Signal-to-noise ratio	66 dB (1kHz at 1Pa, A-weighted)	
Switches	Low cut: on/off;	
	Switch function: touch on/off, momentary on, momentary off; Control: local, remote, LED remote	
Phantom power requirements	22 - 52 V DC, 8 mA	
Contact closure		
Closure input voltage	-0.5 - 5.5 V	
Maximum permissible power	200 mW	
On-resistance	100 ohms	
LED control		
Active low voltage	1.2 V or lower	
Maximum permissible input power	-0.5 - 5.5 V	
Maximum permissible power	200 mW	
Weight	ES925C6/DS5: 674 g (23.8 oz)	
	ES925C12/DS5: 698 g (24.6 oz)	
	ES925C15/DS5: 703 g (24.8 oz)	
	ES925C18/DS5: 708 g (25.0 oz)	
	ES925C21/DS5: 713 g (25.2 oz)	
	ES925C24/DS5: 718 g (25.3 oz)	
Dimensions	ES925C6/DS5: 150.6 mm (5.9") x 97 mm (3.8") x 130 mm (5.1")	
	ES925C12/DS5: 258 mm (10.2") x 97 mm (3.8") x 130 mm (5.1")	
	ES925C15/DS5: 334.2 mm (13.2") x 97 mm (3.8") x 130 mm (5.1")	
	ES925C18/DS5: 410.4 mm (16.2") x 97 mm (3.8") x 130 mm (5.1")	
	ES925C21/DS5: 486.6 mm (19.2") x 97 mm (3.8") x 130 mm (5.1")	
	ES925C24/DS5: 562.8 mm (22.2") x 97 mm (3.8") x 130 mm (5.1") (HxWxD)	
Output connector	TB5M-type	
Optional interchangeable elements	ESE-Ha (100°), ESE-Oa (360°), ESE-MLa (90°)	
Included accessories	7.6 m (24.9') Microphone cable (TA5F, unterminated),	
	Windscreen AT8109a, Set screw (M2x4 mm (0.2")) 2 pcs., Hex wrench (0.89 mm (0.04"))	

■ Polar pattern

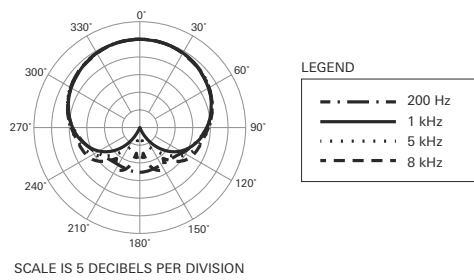

■ Frequency response

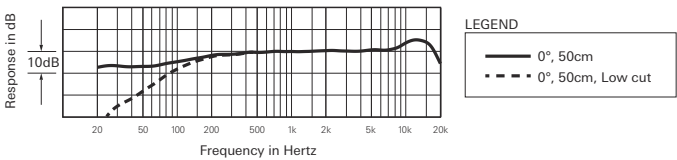

■ Dimensions

